


How to use SCADA alarm logging system for low temperature freezers temperature surveillance

Currently only users with freezers installed with Pt-100 temperature sensors are allowed to have a SCADA account. If your freezer has a Pt-100 installed but you cannot log in to SCADA, please contact the service team to create an account.


1. Log in to SCADA using the address: <https://scada.ki.se> and your account details. The box “Domänanvändare” should not be checked.

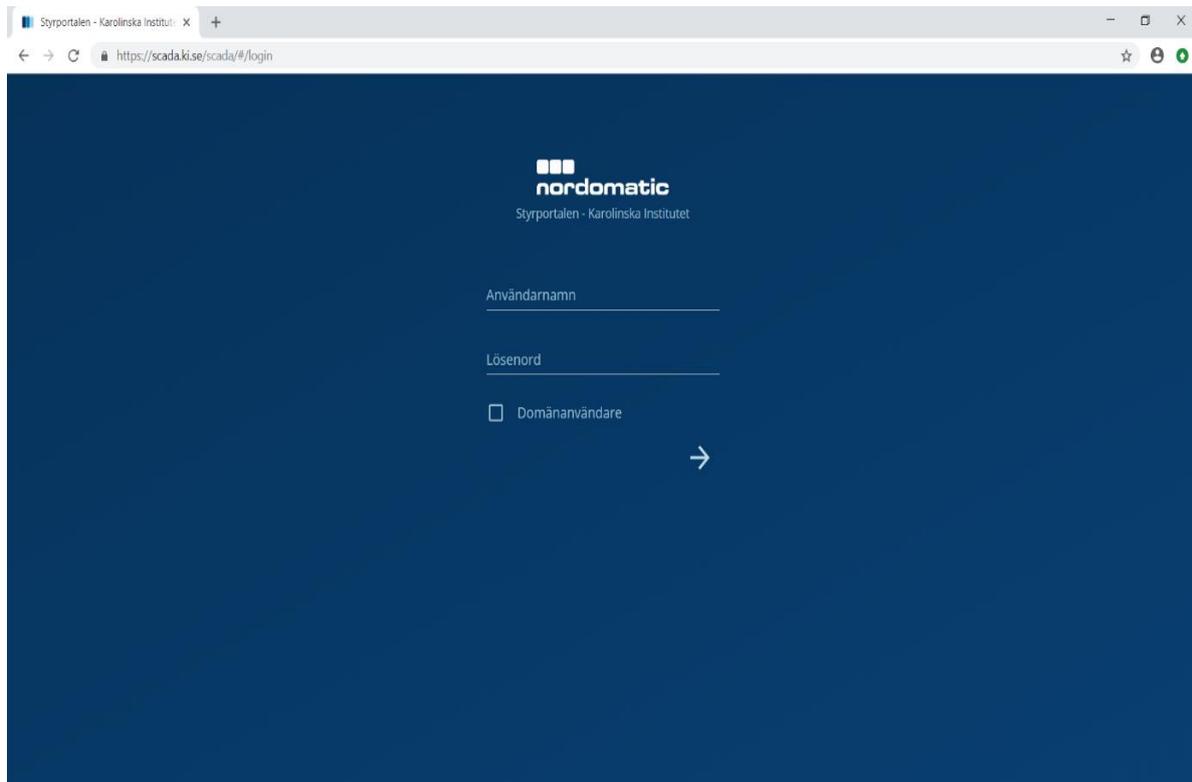

Note; It is highly recommended to use Google Chrome as a web browser when accessing the site.


The website can only be reached while on the KI-network. If you are offsite (at home, on the beach, et c.) you need to use a VPN client. [For information how to set up a VPN click here.](#) Alternatively, contact the IT-department.

- Following log-in, you will be presented with the screen below. This is the “Larmlista” or alarm list screen. Here you can see any active alarms for your freezers or old alarms that has returned to their normal state. In this screen you will only view alarms for your own freezers.

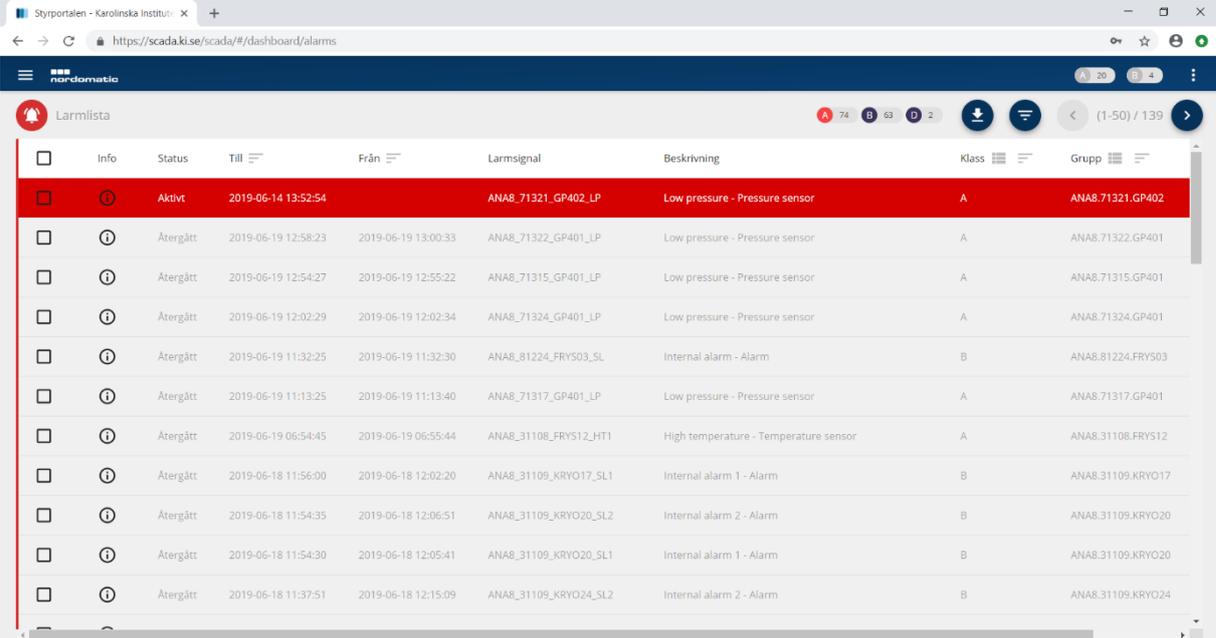


Info	Status	Till	Från	Larmsignal	Beskrivning	Klass	Grupp
<input type="checkbox"/>	Aktivt	2019-06-14 13:52:54		ANA8_71321_GP402_LP	Low pressure - Pressure sensor	A	ANA8.71321.GP402
<input type="checkbox"/>	Återgått	2019-06-19 12:58:23	2019-06-19 13:00:33	ANA8_71322_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71322.GP401
<input type="checkbox"/>	Återgått	2019-06-19 12:54:27	2019-06-19 12:55:22	ANA8_71315_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71315.GP401
<input type="checkbox"/>	Återgått	2019-06-19 12:02:29	2019-06-19 12:02:34	ANA8_71324_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71324.GP401
<input type="checkbox"/>	Återgått	2019-06-19 11:32:25	2019-06-19 11:32:30	ANA8_81224_FRY503_SL	Internal alarm - Alarm	B	ANA8.81224.FRY503
<input type="checkbox"/>	Återgått	2019-06-19 11:13:25	2019-06-19 11:13:40	ANA8_71317_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71317.GP401
<input type="checkbox"/>	Återgått	2019-06-19 06:54:45	2019-06-19 06:55:44	ANA8_31108_FRY512_HT1	High temperature - Temperature sensor	A	ANA8.31108.FRY512
<input type="checkbox"/>	Återgått	2019-06-18 11:56:00	2019-06-18 12:02:20	ANA8_31109_KRYO17_SL1	Internal alarm 1 - Alarm	B	ANA8.31109.KRYO17
<input type="checkbox"/>	Återgått	2019-06-18 11:54:35	2019-06-18 12:06:51	ANA8_31109_KRYO20_SL2	Internal alarm 2 - Alarm	B	ANA8.31109.KRYO20
<input type="checkbox"/>	Återgått	2019-06-18 11:54:30	2019-06-18 12:05:41	ANA8_31109_KRYO20_SL1	Internal alarm 1 - Alarm	B	ANA8.31109.KRYO20
<input type="checkbox"/>	Återgått	2019-06-18 11:37:51	2019-06-18 12:15:09	ANA8_31109_KRYO24_SL2	Internal alarm 2 - Alarm	B	ANA8.31109.KRYO24

- To view the real-time logging of the freezer temperature, click on the list view in the top left corner:

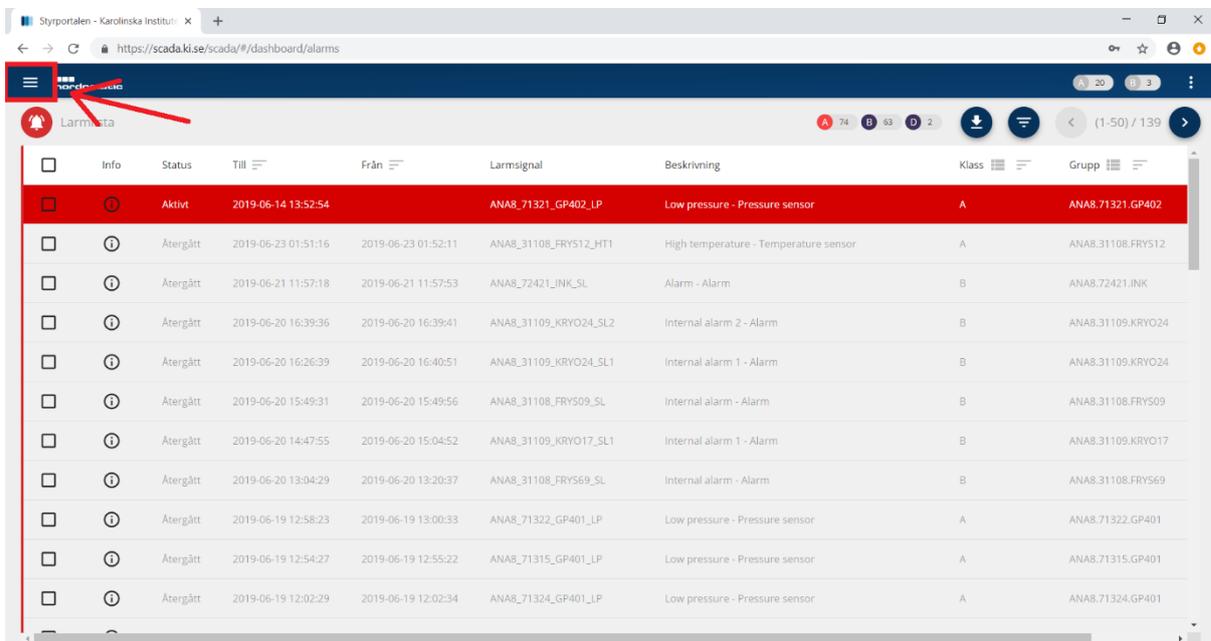

Info	Status	Till	Från	Larmsignal	Beskrivning	Klass	Grupp
<input type="checkbox"/>	Aktivt	2019-06-14 13:52:54		ANA8_71321_GP402_LP	Low pressure - Pressure sensor	A	ANA8.71321.GP402
<input type="checkbox"/>	Återgått	2019-06-23 01:51:16	2019-06-23 01:52:11	ANA8_31108_FRY512_HT1	High temperature - Temperature sensor	A	ANA8.31108.FRY512
<input type="checkbox"/>	Återgått	2019-06-21 11:57:18	2019-06-21 11:57:53	ANA8_72421_INK_SL	Alarm - Alarm	B	ANA8.72421.INK
<input type="checkbox"/>	Återgått	2019-06-20 16:39:36	2019-06-20 16:39:41	ANA8_31109_KRYO24_SL2	Internal alarm 2 - Alarm	B	ANA8.31109.KRYO24
<input type="checkbox"/>	Återgått	2019-06-20 16:26:39	2019-06-20 16:40:51	ANA8_31109_KRYO24_SL1	Internal alarm 1 - Alarm	B	ANA8.31109.KRYO24
<input type="checkbox"/>	Återgått	2019-06-20 15:49:31	2019-06-20 15:49:56	ANA8_31108_FRY509_SL	Internal alarm - Alarm	B	ANA8.31108.FRY509
<input type="checkbox"/>	Återgått	2019-06-20 14:47:55	2019-06-20 15:04:52	ANA8_31109_KRYO17_SL1	Internal alarm 1 - Alarm	B	ANA8.31109.KRYO17
<input type="checkbox"/>	Återgått	2019-06-20 13:04:29	2019-06-20 13:20:37	ANA8_31108_FRY569_SL	Internal alarm - Alarm	B	ANA8.31108.FRY569
<input type="checkbox"/>	Återgått	2019-06-19 12:58:23	2019-06-19 13:00:33	ANA8_71322_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71322.GP401
<input type="checkbox"/>	Återgått	2019-06-19 12:54:27	2019-06-19 12:55:22	ANA8_71315_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71315.GP401
<input type="checkbox"/>	Återgått	2019-06-19 12:02:29	2019-06-19 12:02:34	ANA8_71324_GP401_LP	Low pressure - Pressure sensor	A	ANA8.71324.GP401

4. Next, click on: Anläggningar -> Karolinska Institutet -> ANA8 -> Freezers/Fridges

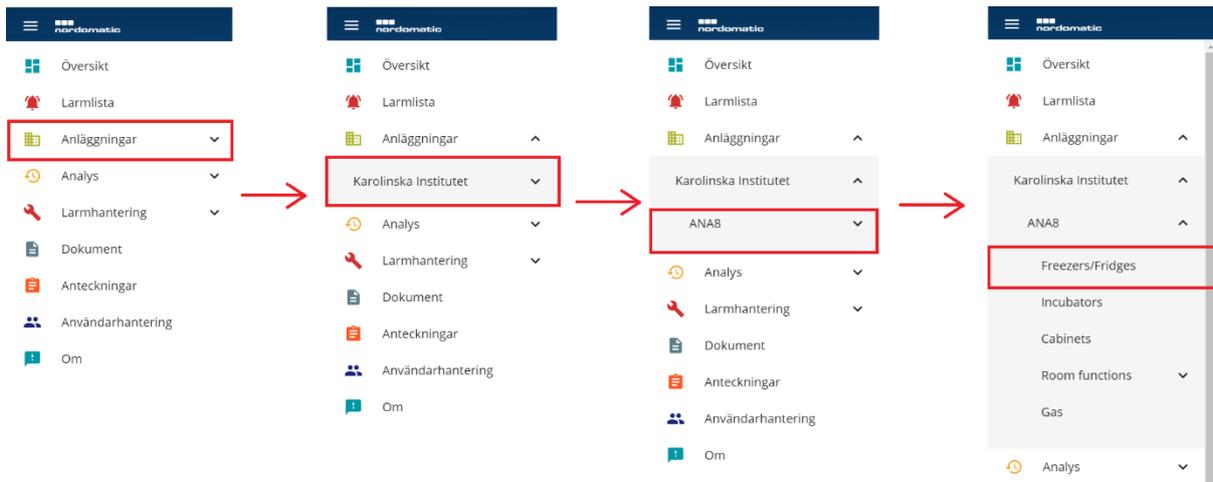

5. Now you will see all alarm connections to the freezers in ANA Futura.

Placement	Freezer/Fridge	Object manager	Task form manager	State	Temperature	Alarm 1	Alarm 2
31105 B3 Freezer hotel	31105-FRYS01	Type info here... ()	Type info here... ()	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRYS02	Type info here... ()	Type info here... ()	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRYS03	Type info here... ()	Type info here... ()	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRYS04	Type info here... ()	Type info here... ()	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRYS05	Type info here... ()	Type info here... ()	Not activated	0,0 °C	⊗	
31108 Electric freezers	31108-FRYS01	Type info here... ()	Type info here... ()	Activated	-70,3 °C	⊗	
31108 Electric freezers	31108-FRYS02	Type info here... ()	Type info here... ()	Activated	27,8 °C	⊗	
31108 Electric freezers	31108-FRYS03	Type info here... ()	Type info here... ()	Activated	-82,1 °C	⊗	
31108 Electric freezers	31108-FRYS04	Type info here... ()	Type info here... ()	Activated	-76,7 °C	⊗	
31108 Electric freezers	31108-FRYS05	Type info here... ()	Type info here... ()	Activated	-81,4 °C	⊗	
31108 Electric freezers	31108-FRYS06	Type info here... ()	Type info here... ()	Activated	-78,6 °C	⊗	
31108 Electric freezers	31108-FRYS07	Type info here... ()	Type info here... ()	Activated	-79,7 °C	⊗	

It is not possible to filter this list to only show your own freezers. All freezers of every research group at ANA Futura will be shown in this list. It is important to know the names of your freezers in SCADA. These are shown in the second column "Freezers/Fridge".

Note: although you can see every freezer you will NOT be able to change any critical settings for freezers you have not specifically been granted access to.

Placement	Freezer/Fridge	Object manager	Task form manager	State	Temperature	Alarm 1	Alarm 2
31105 B3 Freezer hotel	31105-FRY501	Type info here... 0	Type info here... 0	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRY502	Type info here... 0	Type info here... 0	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRY503	Type info here... 0	Type info here... 0	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRY504	Type info here... 0	Type info here... 0	Not activated	0,0 °C	⊗	
31105 B3 Freezer hotel	31105-FRY505	Type info here... 0	Type info here... 0	Not activated	0,0 °C	⊗	
31108 Electric freezers	31108-FRY501	Type info here... 0	Type info here... 0	Activated	-70,3 °C	⊗	
31108 Electric freezers	31108-FRY502	Type info here... 0	Type info here... 0	Activated	27,8 °C	⊗	
31108 Electric freezers	31108-FRY503	Type info here... 0	Type info here... 0	Activated	-82,1 °C	⊗	
31108 Electric freezers	31108-FRY504	Type info here... 0	Type info here... 0	Activated	-76,7 °C	⊗	
31108 Electric freezers	31108-FRY505	Type info here... 0	Type info here... 0	Activated	-81,4 °C	⊗	
31108 Electric freezers	31108-FRY506	Type info here... 0	Type info here... 0	Activated	-78,6 °C	⊗	
31108 Electric freezers	31108-FRY507	Type info here... 0	Type info here... 0	Activated	-79,7 °C	⊗	

6. Your freezer is identifiable by the alarm port number, which appears on the laminated note ON the freezer:

ANA Futura Freeze facility		Freezer number:
Information about this freezer:		3
Room number:	71119	
Freezer alarm number:	ANA8-71119-FRYS3	
Scientist group:	LABMED - Klin micro	
Service company:	AB Ninolab	
Set temperature (celsius):	-80	
Model number:	88600V60	
Serial number:	0123726601110829	
Contact list when alarming:		Is the freezer connected to the alarm:
Name	24h Telephone no.	Yes

As well as with a small red tag on the alarm connection (on the wall behind the freezer or high up above the freezer):




7. Once you have localized your freezer in the list, look at the 6th column “Temperature”, which displays the actual temperature. This applies only for freezers with PT-100. Click on the blue number:

Placement	Freezer/Fridge	Object manager	Task form manager	State	Temperature	Alarm 1	Alarm 2
71418	71418-FRYS01	Type info here... ()	Type info here... ()	Not activated	0,0 °C		
71419	71419-FRYS01	Type info here... ()	Type info here... ()	Not activated	0,0 °C		
72211	72211-FRYS01	Type info here... ()	Type info here... ()	Activated	0,0 °C	⊗	
72211	72211-FRYS02	Type info here... ()	Type info here... ()	Activated	0,0 °C	⊗	
72211	72211-FRYS03	Type info here... ()	Type info here... ()	Activated	0,0 °C	⊗	
72211	72211-FRYS04	Type info here... ()	Type info here... ()	Activated	0,0 °C	⊗	
72211	72211-FRYS05	Type info here... ()	Type info here... ()	Activated	-79,1 °C	⊗	
72211	72211-FRYS06	Type info here... ()	Type info here... ()	Activated	0,0 °C	⊗	
72215	72215-FRYS01	Type info here... ()	Type info here... ()	Not activated	0,0 °C		
72216	72216-FRYS01	Type info here... ()	Type info here... ()	Not activated	0,0 °C		
72217	72217-KYL01	Type info here... ()	Type info here... ()	Not activated	0,0 °C		
72217	72217-KYL02	Type info here... ()	Type info here... ()	Not activated	0,0 °C		

Note; Freezers that are not connected to a Pt-100 temperature-sensor will display 0°C. This is the default value for freezers that lack an external Pt-100 temperature sensor and does NOT represent the actual temperature.

8. Then click on Trend -> Visa:

Note: do NOT click the button “Dialog”. It is used for the service team to configure alarm settings.

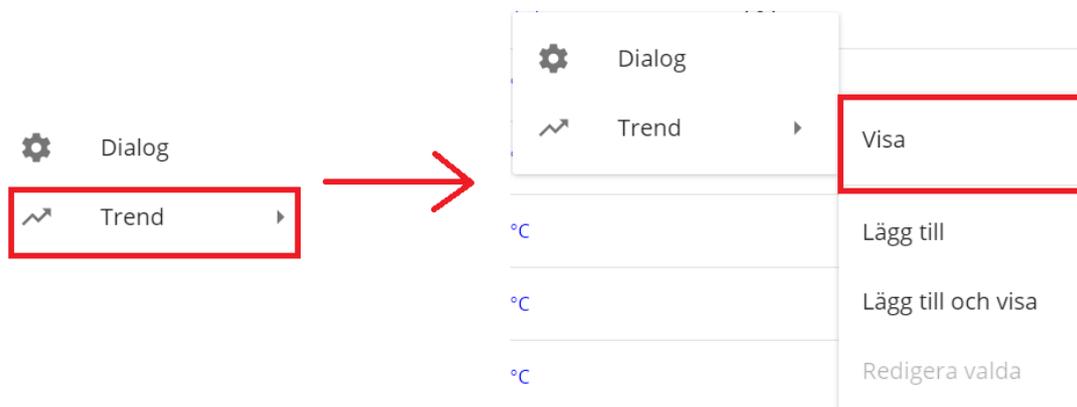


9. Now you will be presented with the following screen:



Here you can view the temperature reading of the Pt-100 sensor with a sampling rate of 5 minutes.

10. To change the time interval, click the cogwheel in the top right. Then click "Välj tidsintervall".

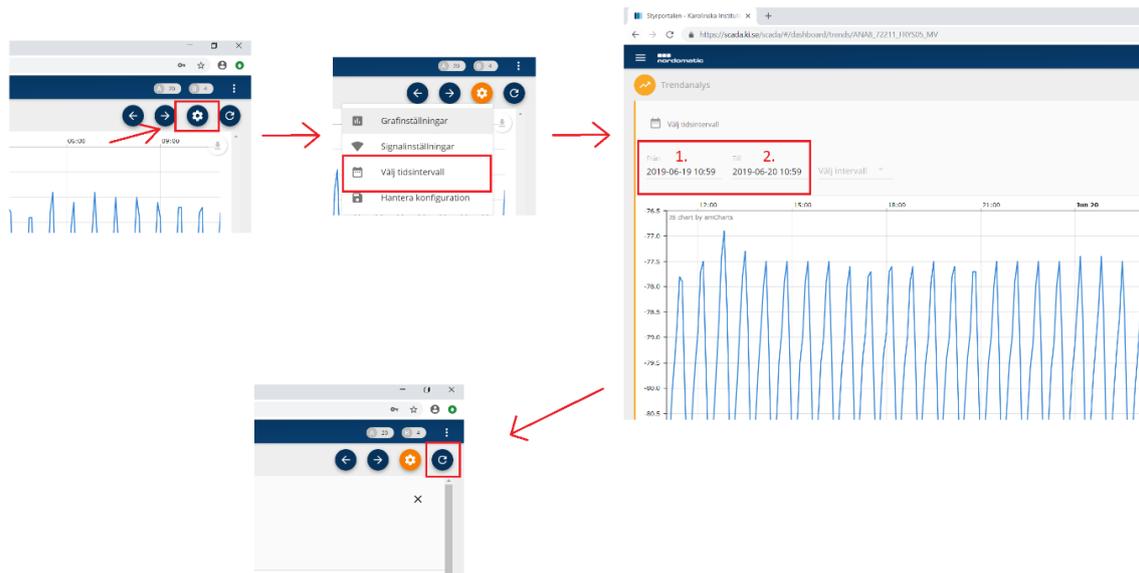

Now an interval field will appear at the top left of the graph. Here you can change the start date "Från" and stop date "Till" of the interval. After you have set the time interval of your choosing you will have to click on the update button in the top right corner, otherwise the new time settings will not be displayed.

11. In order to check another freezer, you will have to click on the list view in the top left corner as in paragraph 3, and thus return to the list of all freezers.

12. "Log out" from SCADA can be found on the top-right hand. Click on the three vertical dots.